



# Controller - Offline Mode Setup

**OFFLINE PROGRAMMING** will allow the controller to run like our traditional controllers, the X-core and the Pro-C models. Each of the six programs (a-f) allows you to start each program up to six times a day, set run lengths, and set specific days to water.

To set up your controller for manual configuration, please follow the steps below:

1. From the main menu, click on **SETTING**.
2. Select **CONFIG**.
3. Select **FACTORY DEFAULT**.
4. Select **ERASE CONFIG**. This will reset the controller back to factory settings. You will be presented with a warning dialogue.
5. Select **CONFIGURE OFFLINE** and begin the wizard steps. Click **OK**.
6. Enter **DATE** and **TIME**. Click **OK**.
7. The next step is to enable a **MASTER VALVE**. Click **OK**. [Learn More](#)
8. Make a section for **MASTER VALVE**, then click **CONFIRM**.
9. Click **OK** to start setting up a **PROGRAM**.
10. Edit **WATER DAYS**. Check all that apply. Click the back arrow.
11. Edit **START TIMES** (default 5:00 AM). Click **ADD** and enter **TIME** (Hours and minutes) (six maximum). Click **OK**.
12. Edit **ZONES**. Highlight a **ZONE**, then check the **ZONE ENABLED** box. Click on the green box and enter a **RUN TIME**. Click **OK** when each applicable zone is complete. Repeat as needed.
13. Click the **HOME** button.

Your Hydrawise controller is now set up to run as a standalone controller.

- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
- 
-