

To set up your controller for manual configuration, please follow the steps below:

- Your Hydrowise controller is now set up to run as a standalone controller.

- [illegible]