



# Wireless HC Flow Meter - Pairing the Transmitter and Receiver

The transmitter and receiver are preconfigured for wireless communication right out of the box. After applying power to either the transmitter or receiver, wait a minimum of 10 seconds for the power-up sequence to complete. During this time, there will be one or more green **LED** blinks before the unit is ready for operation. When flow is occurring, the transmitter will transmit flow sensor data at a maximum rate (depending on flow) of once every 5 seconds. The receiver **LED** will flash green at the same rate to indicate that flow is occurring.