



Wireless HC Flow Meter - Low-Battery Indication (Transmitter)

The receiver LED will flash red twice every 3 seconds to indicate a low or discharged battery. This battery status update will occur only during flow conditions.

□