



# Changing to Standard Mode

The steps and screenshots below describe how to change the programming mode on your controller:

1. Select **CONTROLLER SETTINGS** from the Home dashboard on the left-hand side.
2. Once the configuration screen has loaded, click the icon to edit the mode.
3. After you enter the desired mode for your controller, click **OK**.

For more information on comparing the two different programming modes, click [here](#) [1].

**IMPORTANT:** The controller model HC does not have the **STANDARD MODE** feature so this dropdown will not appear in the software.

## Step 1

□

## Step 2

□

## Step 3

□