



# PRO-HC - Connecting Sensors or Flow Meters (Optional)

The Pro-HC Controller supports most open/closed contact types of sensors. Compatible Hunter flow meters and sensors include the [HC FLOW METER](#) [1], [MINI-CLI<sup>®</sup>](#) [2], [RAIN-CLI<sup>™</sup>](#) [3], [FREEZE-CLI<sup>®</sup>](#) [4], [WIND-CLI<sup>™</sup>](#) [5], and [SOIL-CLI<sup>™</sup>](#) [6].

1. Route the **WIRES** from the rain sensor up through the same conduit opening used for valve wiring.
2. Connect the first wire to the terminal labeled **SEN-1 or SEN-2**.
3. Install the second white wire to the other **SEN (COM)** terminal. See chart below.

**Rain  
Sensor**

**Flow Meter**

□

□