



# HCC - Configure Controller Offline

From the Connection Wizard screen, touch **CONFIGURE OFFLINE**. Tap **OK** to move on to the next step.

Enter in today's date if it hasn't already been set or if it is incorrect. Enter today's time if it hasn't already been set or if it is incorrect. From this screen, touch **OK**.

Next enable a **MASTER VALVE**, if you don't have a master valve then choose **DISABLE MASTER VALVE**. Then touch **OK**.

You can now enter the run length you want for your default zone run time. Then touch **OK**.

Next, set how often each zone will run. As advised on the previous screen, you can set individual frequencies for each zone. Touch **OK** to proceed. From **ZONES** screen, you can manually configure each zone according to your desired schedule. Touch the **ADD** button to add a program start time and follow the steps below. You can toggle between zones by touching **NEXT** or **PREVIOUS** buttons or you can leave the start time to **APPLY TO ALL ZONES**.

□