

# Viewing the Zone Information

The Zone Status screen will allow you to view specific information about the individual zone. To view this screen, select **ZONES**, then select one of six **ZONES** displayed.

1. **Zone Number:** The number of the zone.
2. **Zone Name:** This is the name of the Zone that you configured in the Hydrawise app.
3. **Schedule Run:** This will display the next scheduled cycle.
4. **Run:** Press to Start or Stop To Manually Modify a Zone
5. **Water Use:** Water usage for this zone run. This is only shown if you have a flow meter installed and the zone is currently running.
6. **Sensor:** The current sensor state that is configured in the Hydrawise app.
7. **Current:** Indicates the current that all solenoids are using (including a master solenoid if configured). Generally speaking, this value ranges from 200mA to 600mA depending on the number of solenoids attached to a single zone output. The controller has a built-in fail-safe to automatically stop your zone if more than approximately 800mA is detected as this may indicate a faulty solenoid or wiring.
8. **MV Enabled/Disabled:** If you have a pump or master valve or pump configured in the software, this will display Enabled.

□