




How to Change to Advanced Mode

The steps and screenshots below describe how to change the programming mode on your controller:

1. Select **CONTROLLER SETTINGS** from the home Dashboard on the left-hand side.
2. Once the configuration screen has loaded, click the  icon to edit the mode.
3. After you enter the desired mode for your controller, click **OK.**"

For more information on comparing the two different programming modes, click [here](#) [1].

Step 1

□

Step 2

□

Step 3

□