

# Water Triggers Setup

Hydrawise uses local, real-time weather forecasting and the most accurate weather stations available to fine-tune your irrigation system to current conditions. Water triggers are the settings in your Hydrawise software that can be adjusted based on your watering requirements. When a trigger met the adjusted threshold, it will make the change in the software to either **adjust the watering schedule** or **cancel the watering**.

## Setup

To adjust the water triggers, follow the steps below:

1. From the **HOME** screen, select the (.) icon in the upper left.
2. Select **WATER TRIGGERS**.
3. Adjust each **TRIGGER** that applies to each zone.

Choose which adjustments to apply when editing the program using instructions [here](#) [1].

□

## Predictive Watering Adjustments (Triggers that Cancel Irrigation)

- **Aborted Due to High Probability of Rain**
  - Forecast chance of rain is higher than the trigger, the schedule will reset/check again the following day
- **Aborted Due to High Forecast of Wind Speed**
  - Local wind speed is higher than mph set in the trigger, the schedule will reset/check again the following day
- **Not Watering Due to Low Temperature**
  - Forecast High Temperature is lower than the temperature set in the trigger, the schedule will reset/check again the following day
- **Aborted Due to High Weekly Rainfall**
  - The total amount of rain for the last 7 days is higher than the trigger, the schedule will reset after the last 7 days is less than the trigger
- **Aborted Due to Rainfall Higher last 24 hr**
  - The previous day's rainfall is higher than set in the trigger, the schedule will reset/check again the following day

## Weather Station Adjustments (Triggers that Adjust Schedule)

- Water 30% (Edit) less when today's forecast temperature is less than (X)
- Water 100% (Edit) more when today's forecast temperature is above and humidity is below 100