




Controller Settings

In this section, you will be able to view and change the configuration that includes **CONTROLLER SETTINGS**, **INTERNET SETTINGS**, **REGIONAL SETTINGS**, **VALVE DELAYS**, **WEATHER STATION**, **EXPANSION MODULE INFO**, and **OFFLINE ADJUSTMENT** options.

To make adjustments to any of these settings, follow the steps below:

1. Select the mobile **MENU** icon  on the upper left-hand side of the screen. If using a computer (PC), select the **MENU** icon  on the upper right-hand side of the screen.
2. Select **CONTROLLER SETTINGS**, **INTERNET SETTINGS**, **REGIONAL SETTINGS**, **VALVE DELAYS**, **WEATHER STATION**, **EXPANSION MODULE INFO**, or **OFFLINE ADJUSTMENT** options.
3. Click the  icon to adjust each setting.

Controller Settings

Controller

Name - San Marcos Controller

Serial Number - 05*****

Status - Linked

Model -Pro HC 12 Station Controller

Install Date - Sat, 06 Jul 19 18:32:34 +0000

Software - e.g., 4.31

Programming Mode - Standard

Descriptions

The name of your controller.

The controller's serial number. Click Remove Serial to remove the serial number and replace it with another physical controller.

Linked represents the controller is attached to an account.

Model on the actual controller.

When the controller was first connected to the internet.

Latest firmware version. This happens automatically when connected to the internet.

Standard or Advanced. [Learn more.](#) [1]

Internet Settings

Offline Mode - Use static watering times

Hide Password - Yes/No

Descriptions

The controller will water the last program that was synced into the controller.

You have the option to hide the password on the actual controller screen.

Regional Settings

Timezone - America/Los_Angeles

Descriptions

Here you have the ability to change the time zone. This is automatically set when you set a weather station.

Delays

Inter Zone Delay - 0 Seconds

Master Valve Delay - 0
Seconds

Descriptions

The number of seconds to insert between each zone watering when calculating scheduled.

The minimum number of seconds that the master valve should be active before any zone starts.

Weather Stations

Setting your location allows your Hydrowise controller to adjust watering based on your local weather conditions.

IMPORTANT: Your weather forecasts and local weather stations are based upon your location so it is important to configure your location correctly in the application.

The chart below has the stations available based on the plan you have on your account.

- The **BLUE** station would be the station you selected in that area.
- A virtual weather station will always appear on your exact address since it is virtual and hardware at the site does not exist. For more information on virtual stations, click [here](#) [2].

Stations

Personal Weather Stations - Green

Airport and Virtual Weather Stations - Purple

Descriptions

Five stations can be selected on the **Enthusiast plan**. Click [here](#) [3] for more info.

Only one station can be selected on a free **Home Plan**

Expansion Modules (HC Models Only)

In this section, you can view your expansion modules, and when they last made contact with the internet. You can add a maximum of two expansion modules to a single Hunter HC controller. When you add an expansion module, you will need to give it a name and specify the ID number that you selected when setting up the module. This number needs to match the number at the physical expansion module as well.

□

Offline Water Adjustments

Offline water adjustments allow the controller to automatically adjust the amount of watering on a month-by-month basis if the controller is in an Offline mode (e.g; not connected to the internet).

□